73360 rev4 11/7/06 14:43 Page 1

morphy richards®

Cyclonic bagless vacuum cleaner

Please read and keep these instructions

Getting the best from your new cleaner...

If your cleaner is not picking up as well as it should, please check

Dust canister

It is important to regularly empty the canister even if it does not appear full.

Filters

It is important that the pleated filter is shaken clean each time the dust canister is emptied to allow air through the appliance. Wash the canister filters regularly in warm water and allow to air dry. A spare pleated filter is included.

Blockages

Check the hose, tubes and tools for blockages

Safety cut-out

If the air-flow is bloked or the filters are not regulary cleaned a thermostat may operate. If this happens, switch off and disconnect from the mains supply. Clear any blockage, empty and clean the filters. Allow 60 minutes for the thermostat to reset.

Belt

Check and replace damaged or broken belt

Height adjustment

The height adjustment only comes into effect when the handle is released by the handle release pedal **16**.

CE 2year guarantee

For replacement parts, help with using your Morphy Richards, problems and lots more, contact us by phone or through our website.

VC73360MUK Rev 4

UK Helpline: 0870 060 2604
Replacement parts: 0870 167 6635
Ireland 1800 409119

www.morphyrichards.com

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance.

Location

- Do not use or keep this product outside in the rain.
- Do not store the appliance near hot surfaces eg ovens or heating appliances.

Mains lead

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged the cable assembly must be replaced. Do not attempt this task yourself, contact the helpline number that is found at the bottom of the page.

Personal safety

- **WARNING: Keep loose clothing, hair, fingers etc. away from the floor nozzle whenever the cleaner is connected to the mains.**
- **Disconnect from the mains supply before attempting to clear blockages, clear the brush or replace the belt.**
- Disconnect from the mains supply before cleaning or emptying the appliance.
- Never modify the cleaner in any way.
- Never use in the presence of explosive liquid or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Never touch the plug or cable with wet hands.
- Unprofessional repairs can be dangerous for users.
- Use only Morphy Richards spare parts and accessories.
- The appliance must never be left running unsupervised.
- This appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.
- Always disconnect the appliance from the main supply after use.
- To protect against fire, electric shock and personal injury do not immerse cord, plug or cleaner in water or other liquid.

Product safety

- Never use the appliance without the filters being installed.
- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Never over-extend the hose such that the cleaner is pulled over. If the cleaner is knocked over, switch off before attempting to upright.
- Never pick the cleaner up by the floor nozzle when connected to the mains, use the carrying handle.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.

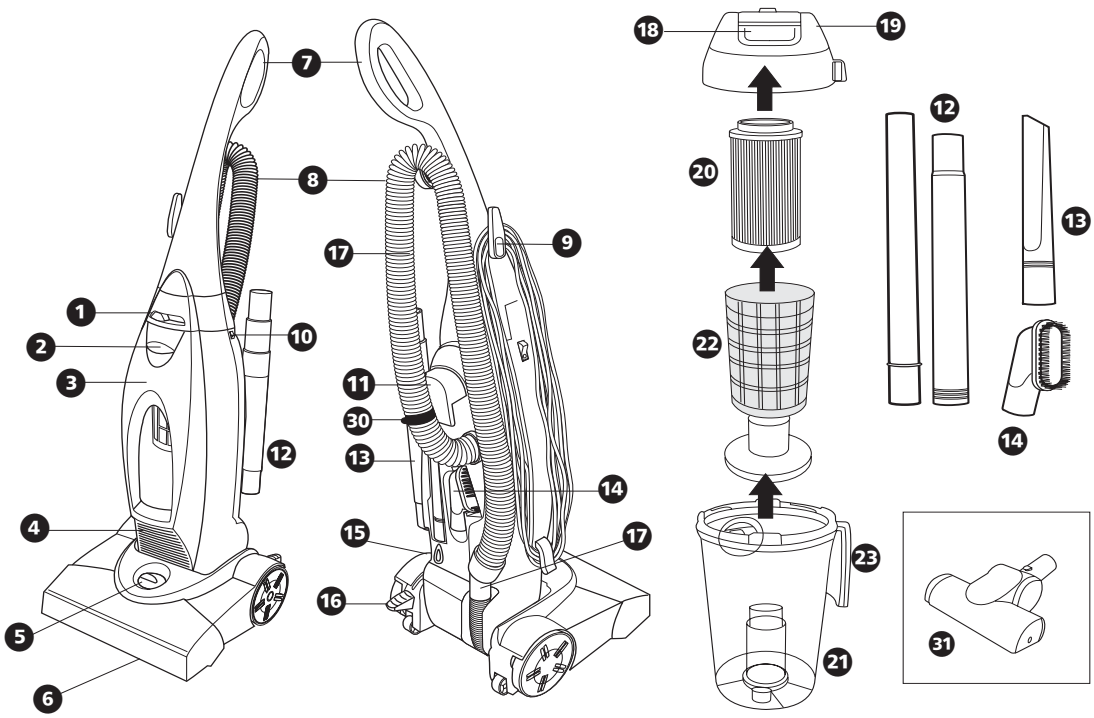

FEATURES

1. Vari power slider (certain models only)
2. Front cover release
3. Removable front cover
4. Exhaust filter grille
5. Carpet height adjustment knob
6. Floor nozzle with powered brush
7. Upper handle
8. Flexible hose
9. Cord storage with quick release cleat
10. On/Off switch
11. Carrying handle
12. Nested extension tubes (2)
13. Crevice nozzle
14. Furniture brush
15. Hose clip slot
16. Handle release pedal
17. Hose connector
18. Dust canister release (shown page 5)
19. Dust canister lid
20. Pleated circular filter
21. Dust canister
22. Central mesh filter
23. Canister handle
24. Motor protection filter (shown page 6)
25. Exhaust filter (page 6)
26. Belt cover (shown page 7)
27. Brush bar (page 7)
28. Motor shaft (shown page 7)
29. Brush bar end caps (shown page 7)
30. Hose clip
31. Turbo nozzle (certain models only)
32. Belt guard (shown page 7)

OPERATING THE APPLIANCE

Assembly A

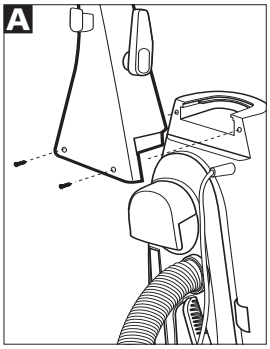

WARNING: Do not plug in the cleaner until it is assembled.

1 Carefully unpack all components.

2 Lift cleaner body to upright position.

3 Remove the two screws that are already attached to the body.

4 From the rear of the cleaner, align the handle with groove and slide into the body. If necessary, use thumb and finger pressure to slide handle into position.

5 Fasten the handle with the two screws.

Floor nozzle height adjustment B

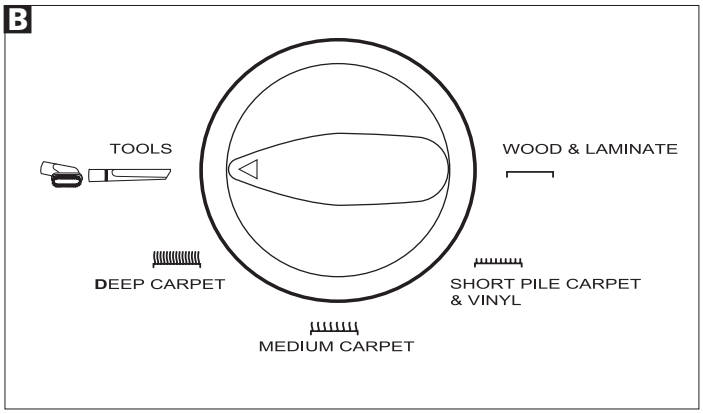

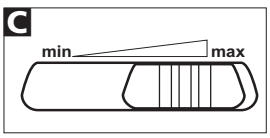

Before using the cleaner the floor nozzle height must be set to the correct height.

Choose the setting which most closely matches your floor surface.

- Use the TOOLS setting when using the tools.

Note: The height adjustment only comes into effect when the handle is released by the handle release pedal ť.

Variable power C

(Certain models only)

Slide the variable power control to the right to increase the suction power or to the left to decrease suction. This feature is most useful when using the hose and accessories. Use the minimum setting when vacuuming delicate fabrics/curtains etc. When not using the hose it is advisable to keep the variable slider set to maximum.

Using on carpets

1 Place cleaner in its upright position.

2 Set the carpet height adjustment knob to the desired position.

3 Release the mains cable by revolving the quick release cleat 1/2 a turn and extend the cable fully.

4 Plug the cable into the mains socket.

5 Step on the handle release pedal to release the handle to the desired position.

6 Press the on/off button to the 'on' position.

IMPORTANT: To prevent damage to carpets, never leave the cleaner switched on in one place for an extended period.

- Never have the brushes set too low such that the cleaner is hard to push.

Using attachments

Follow steps 1-4 but set the carpet height adjustment knob to the TOOLS setting.

5 Remove the hose connector ⓱ from the rear of the cleaner. Lift the hose ❽ from the top handle hook. Insert the hose clip ų into the hose clip slot ⓯.

- Push the required attachment firmly onto the end of the hose.

- If additional length is required, attach one or both extension tubes.

6 Switch on/off.

- IMPORTANT: Always fix the hose clip ㉚ to the main body slot ⑮ when using the hose and tools.

- Never over extend the hose such that the cleaner is pulled over.

  IMPORTANT: Turning the cleaner sideways helps prevent the cleaner being pulled along by the stretch hose.

Using & cleaning turbo nozzle

(Certain models only)

Attach the turbo nozzle to the hose end connector Í for use on upholstery and stairs.

After use your turbo nozzle may become clogged. Turn over the nozzle and pull away any hairs or fibres. If they are tightly wound around the brush carefully snip the fibres with scissors, being careful not to damage the brush bar, pull away from the brush bar and dispose.

EMPTYING

Empty the dust canister regularly even if it does not look full this will maintain the performance.

1 Remove the front cover by lifting the cover release lever ② **E**.

2 Lift-up the dust canister release ⑱ and pull the canister away from the main body.

3 Take the canister to the dustbin.

4 Turn the lid 1/4 turn anti-clockwise to unlock, lift off the lid with pleated filter, ⑳ put to one side. **F**

5 Lift out the central mesh filter ㉒ from the dust canister ㉑ **G**. Brush clean if necessary.

6 Empty out the dust canister ㉑.

7 Re-fit the central mesh filter.

8 Shake the pleated filter to remove all dust.

9 Re-fit pleated filter with lid into the dust canister by lining up the two arrows and turning the lid 1/4 turn clockwise to lock.

10 Re-fit dust canister into cleaner and push to lock into position. Then re-fit front cover.

D

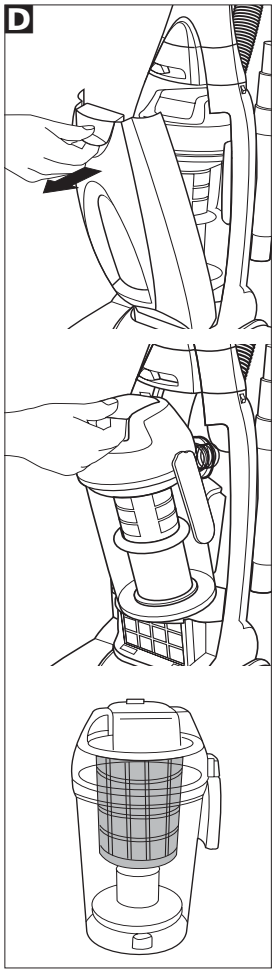

E

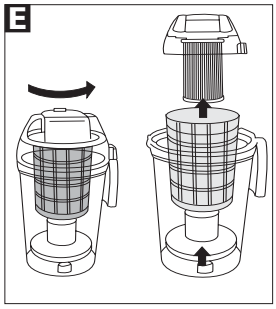

F

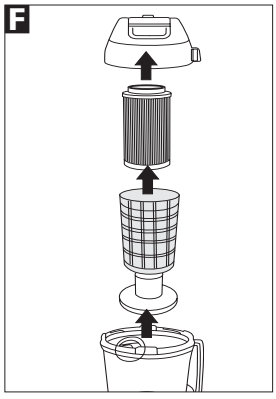

G

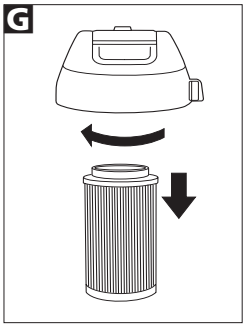

H

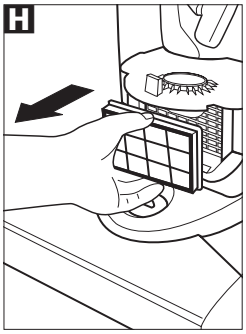

I

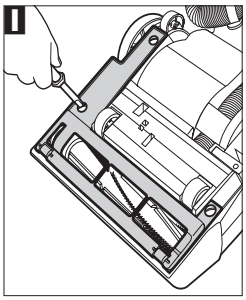

SAFETY CUT-OUT

If the cleaner overheats a motor protection thermostat will automatically switch the motor off. If this happens, **switch the cleaner off, unplug from the power supply and leave the cleaner to cool for at least 60 minutes**. Check the airways for blockages, empty dust canister and clean the filters before restarting.

CLEANING THE FILTERS

To maintain suction the pleated filter must be shaken clean each time the dust canister is emptied. Failure to clean the filter will reduce suction and could damage the motor if used for a prolonged period. This may invalidate the guarantee. If the filters become damaged they must be replaced.

Pleated filter

This must be shaken clean at every emptying to maintain suction. To thoroughly clean it wash it regularly.

To remove it from the dust canister lid turn the filter 1/4 turn anti-clockwise. G Wash in warm water (no detergent) and allow to air dry before refitting. The spare pleated filter allows one filter to be washed and dried whilst the other is in use.

Motor protection filter H

The motor protection filter 24 is located underneath the dust canister

1 Remove the dust canister.

2 Lift out the filter and shake over a dustbin.

The filter may also be washed in water (no detergents) but must be totally dry before re-fitting.

3 Replace the filter

Exhaust filter I

The exhaust filter is located below the dust canister compartment.

1 Remove the front cover.

2 Remove the exhaust filter 25 by pulling forward at the top and lift it away.

3 Take the filter out of the cage and shake vigorously over a dustbin. The filter may also be washed in warm water. Do not use detergents. The filter must be completely dry before re-fitting. Allow filters to air dry naturally.

4 Replace the filter and front cover.

Changing the belt

If the brush bar stops rotating it is likely that the drive belt has snapped (usually because the brush has been stalled). A spare belt is supplied. Replacement belts can also be obtained from Morphy Richards.

Accessing the floor nozzle I

1 Disconnect the cleaner from the mains supply.

2 Put switch to off position.

3 Remove front cover and dust canister.

4 Press the handle release pedal and place the cleaner face down, in a flat position on a soft surface (eg carpet).

5 Using a flat bladed screwdriver or a coin, rotate the three cover fixings, a quarter of a turn, from lock to unlock I .

6 Lift the base cover, from the rear fixing area first, the cover will rotate forward. Unhook cover from front edge and remove M.

Removing rotating brush & belt K

7 Lift the metal belt guard 32 out of the floor nozzle and put it safely to one side J.

8 Slide the belt past the end of the motor drive shaft. If the belt has broken remove al pieces and clean the drive shaft.

9 Lift the rotating brush equally at both ends to slide it free of the floor nozzle K. Holding the ends of the brush check it rotates freely or not, it must be replaced. Call our Helpline for replacement parts or belts.

Re-fitting rotating brush & belt L

10 Hook the belt over the the drive shaft (the belt must be slid sideways past the end of the drive shaft). Note: Belt guard must have been removed first, see 7 above.

11 Refit the belt guard, ensuring it is correctly located. Press down fully.

12 Pass the rotary brush through the belt ensuring the correct end is located against the belt. M

13 Pull the brush forward (against the pull of the belt) and locate the square ends of the brush into location slots in the floor nozzle M.

14 Rotate the brush by hand to ensure the belt is running in the center of its location on the brush.

Refitting floor nozzle base cover M

15 Hook the base cover into the front of the floor nozzle, ensuring all four hooks are engaged M.

16 Rotating the cover downwards and rearwards, slowly close the cover.

17 Tighten three fixings, using screwdriver to turn fixings a quarter of a turn to the lock position.

Note: If the cover will not fully close or fixings will not lock, lift the cover slightly and rotate fixings until they are in the correct position for closure.

18 Return cleaner to the upright position, re-fit dust canister and front cover. Connect to the mains supply. Switch on to test.

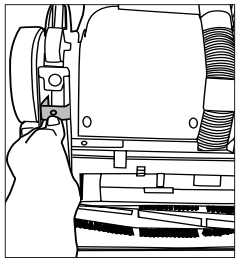

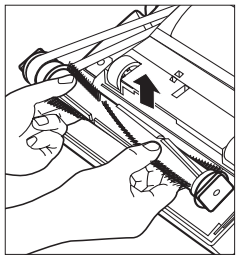

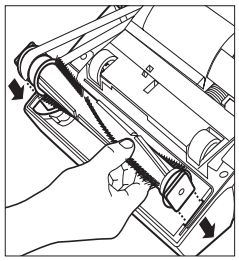

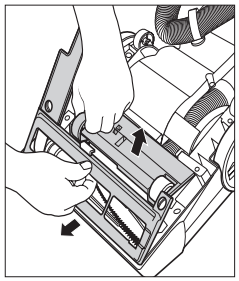

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

UK Helpline	0870 060 2604
Replacement Parts	0870 167 6635
Ireland Helpline	1800 409119

YOUR TWO YEAR GUARANTEE

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards Products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting model number and serial number on the product, or write to Morphy Richards at the address shown. You will be asked to return the product (in secure, adequate packaging) along with a copy of proof of purchase. Subject to the exclusions set out below (1-6), the faulty appliance will then be repaired or replaced and dispatched usually within seven working days of receipt.

If for any reason this item is replaced during the 2-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of initial purchase.

To qualify for the two-year guarantee the appliance must have been used according to the manufacturers instructions. For example the filters shall have been regularly cleaned as instructed.

Morphy Richards shall not be liable to replace or repair the goods under the terms of the Guarantee where:

EXCLUSIONS

1 The fault has been caused or is attributable to accidental use, mis-use, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.

2 The appliance has been used on a voltage supply other than that stamped on the products.

3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

4 Where the appliance has been used for hire purposes or non-domestic use.

5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

6 Consumables such as the filters and belt are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.

For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste.
Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

morphy richards®

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helpline (office hours)
UK 0870 060 2604
Republic of Ireland 1800 409119

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

VC73360MUK Rev4 07/06

For details of other products in the Morphy Richards range please see our website . . .